



GOSURROUND 610

2.1 Soundbar
Speaker System

Get ready for MORE, for a LIFE of WOW with your all new GOSURROUND 610. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.




 
PACKAGE CONTENTS

- 1 x Soundbar
- 1 x Subwoofer
- 1 x AUX Cable
- 1 x User Manual
- 1 x Remote Control
- 1 x Warranty Card

SPECIFICATIONS


Input	110-240V AC 50/60Hz
Output Power	100W
Soundbar Drivers	2 x 2.25"
Subwoofer Driver	1 x 5.25"
Subwoofer (Dimension in mm)	W150 x D280 x H340
Soundbar (Dimension in mm)	L800 x D58 x H68
Bluetooth Version	V5.3

PRODUCT USE


- 1 Plug the power cable of the soundbar to the external socket, the unit is in standby mode.
- 2 Please plug the RCA cable of the woofer to the SUB output jack in the soundbar and plug the AC power cord to power on the product.
- 3 AUX: Use 3.5mm AUX in cable to connect external audio sources (DVD, Mobile, TV). Press  on panel or INPUT key in the remote control to select AUX IN mode.
- 4 HDMI: Use your HDMI cable to connect the soundbar with your HDMI (ARC) device. Press  on panel or INPUT key in the remote control to select HDMI mode.
- 5 USB: Insert your USB disk into the USB socket in the soundbar, it will switch to USB mode automatically. You can also press  on the panel or INPUT key in the remote control to switch USB mode.
- 6 BT: Press  on panel or INPUT key in remote control to enter BT mode. Turn on the Bluetooth on your device, find 'GOSURROUND 610' in the Bluetooth list and start the pairing.
- 7 ERP low power consumption mode: If there is no signal input for 30 minutes, Soundbar will automatically enter the Standby mode.

REMOTE BATTERY INSTALLATION

- 1 Open the battery case.
- 2 Insert 2 batteries with the polarity reversed.
- 3 Close the battery case.
- 4 Keep within 5 meter range, 30 degree angle while aiming to the unit.

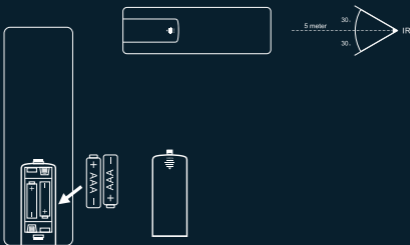

DESCRIPTION OF THE REMOTE CONTROL

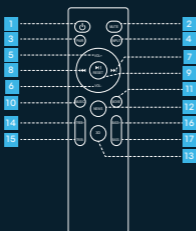

- 1 "Power" Key: Standby mode for power ON/OFF.
- 2 "MUTE" Key: MUTE ON/OFF.
- 3 "PAIR" Key: Bluetooth disconnect/connect, long press to disconnect Bluetooth, long press again to reconnect to Bluetooth.
- 4 "INPUT" Key: The input mode switch, BT, HDMI (ARC), USB, AUX-IN input mode cycle switch. (Attention: When connected to a mobile device via Bluetooth, the volume of the Soundbar will match the volume of the device automatically)
- 5 Volume + Key: Increase the volume level in all modes (BT, HDMI, USB, AUX IN).
- 6 Volume - Key: Decrease the volume level in all modes (BT, HDMI, USB, AUX IN).
- 7 >>> Key:
 - Bluetooth mode: Short press for next song
 - USB mode: Short press for next song & Long press for fast forward
- 8 <<< Key:
 - Bluetooth mode: Short press for previous song
 - USB mode: Short press for previous song & Long press for backward
- 9 >||< RESET Key: Short Press
 - Bluetooth mode: pause/play
 - AUX - IN mode: MUTE/ UNMUTE
- 9 >||< RESET Key: Long Press for RESET
 - After resetting the default Volume is ("U 15"), Bass ("SU 8") & Treble ("HI 8")
- 10 "MUSIC" Key: Music Equalizer Mode, which is the default. The LED display shows E1.
- 11 "MOVIE" Key: Movie Equalizer Mode. The LED Display shows E2.
- 12 "NEWS" Key: News Equalizer Mode. The LED Display shows E3.
- 13 "3D" Key: 3D Equalizer Mode. The LED Display shows E4.
- 14 TREB + : Increase the treble level.
- 15 TREB - : Decrease the treble level.
- 16 BASS + : Increase the bass level.
- 17 BASS - : Decrease the bass level.

SOUNDBAR (BACK)



- 1 AUX IN
- 2 HDMI (ARC)
- 3 SUB OUTPUT

BUTTON CONTROL



- 1 "+" Key: Short press for next track & long press it to adjust volume up in all modes.
- 2 "▶/||" Key: Bluetooth mode, Short press to pause/play, long press to disconnect/connect.
"▶/||" Key: USB mode, Short press to pause/play.
- 3 "-" Key: Short press for previous track & long press to adjust the volume down in all modes.
- 4 USB input.
- 5 "⏻" Key: Short press to power ON & Short press to change Input cyclically from BT, HDMI (ARC), USB, to AUX IN & long press to power OFF.

WALL MOUNTING

- Measure 24.41 inches (620mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the soundbar to the screws on the wall and press and push the soundbar to the right 1/8 inch each to lock.

SAFETY INSTRUCTIONS

- 1 Read these instructions before using the product.
- 2 Read all warnings carefully.
- 3 Follow all instructions carefully.
- 4 Do not use this apparatus near water.
- 5 Clean only with dry cloth.
- 6 Do not block any ventilation openings. .
Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 7 Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- 8 Only use attachments/accessories specified by the manufacturer.
- 9 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.
- 10

Explanation of the symbols on the device



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

AC POWER

IMPORTANT NOTES

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting to AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has been damaged.

Life's too short for "ok". Too short to have stuff in our lives that's "ok, I guess". "But-I'm-almost-home!" battery life. "But-it-only-fell-off-the-table" build quality. "Has-someone-stolen-the-bass?" sound quality.

We say NO to "ok". In 2021, we set out to make stuff that's better in little ways that make a big difference.

Stuff for people who expect more. Who want the songs to keep playing until they're home. Who are on a mission to stay up all night. Who want to know they'll feel great and look awesome, every day.

For people who want every day to be a 'wow' day.

GO VO